

**Safety check before every start of work: BeA Pneumatic Tools**



Disconnect device from the air supply



Visual inspection for damage



Check for flawless functionality of release mechanism



Inspection of the protective and magazine covers



Check condition of air plug nipple and coupling for tightness



Check for air loss and leaks

**Check not passed?  
Do not use the device any more and return it to service!**

**Please always pay attention:**



Keep manual available



Oil regularly



Never use the tool as a „hammer“

